

The table shows all of the features of the road barrier-specific control panels. Those in bold-type are important when selecting which operator to fit and should be considered from the start.



Models / Series	G2500	G4040E G4040IE G2080E G2080IE	G3250 G3751 G4040Z G2080Z G2080IZ G6500 G6501	G1200K	G3000		
Control board / Control panel	ZC5	ZL39	ZL38	ZL37B	ZL30		
<b>Features</b>							
<b>Safety</b>							
<b>SELF-DIAGNOSIS of safety devices</b>		●			●		
PRE-FLASHING during opening and closing		●	●	●	●		
RE-OPENING during closing	●	●	●	●	●		
RE-CLOSING during opening							
<b>Obstacle STALL</b>		●			●		
TOTAL STOP	●	●	●	●	●		
PARTIAL STOP							
<b>OBSTACLE DETECTION in front of photocells</b>		●	●	●	●		
ENCODER		●			●		
MOVEMENT CONTROL and OBSTACLE DETECTION device		●			●		
AMPEROMETRIC DETECTION		●	●	●	●		
<b>Command</b>							
PEDESTRIAN OPENING							
PARTIAL OPENING							
ONLY-OPEN feature with transmitter and/or button		●	●	●	●		
Button connection for ONLY-OPEN or ONLY-CLOSE feature	●	●	●	●	●		
OPEN-STOP-CLOSE-STOP from transmitter and/or button					●		
OPEN-CLOSE-REVERSE from transmitter and/or button	●	●	●	●	●		
MAINTAINED ACTION		●	●	●	●		
DELAYED OPENING of 1st leaf							
DELAYED CLOSING of 2nd leaf							
<b>IMMEDIATE CLOSING</b>		●	●	●	●		
<b>EMERGENCY RELEASE from transmitter</b>							
<b>Characteristics and adjustments</b>							
Output for connecting the FLASHING LIGHT	●	●	●	●	●		
<b>Output for connecting the CYCLE LAMP</b>		●					
<b>Output for connecting the COURTESY LAMP</b>		●					
Antenna	●	●	●	●	●		
Output for connecting the SIGNALLING LAMP (gate open)	●	●	●	●	●		
Output for connecting the SIGNALLING LAMP (gate closed)	●						
<b>Contact output for 2nd RADIO CHANNEL</b>							
OPERATION TIME adjustment	●	●			●		
SELF-LEARNING of transmitter RADIO CODE	●	●	●	●	●		
Output for connecting ELECTRIC LOCK and/or "WATER HAMMER"							
Adjustable TIME before AUTOMATIC CLOSING	●	●	●	●	●		
<b>Slow-down during OPENING and/or CLOSING</b>		●	●	●	●		
<b>EMERGENCY FUNCTIONING with batteries</b> (optional)		●	●	●			
<b>MASTER-SLAVE</b>		●	●				
<b>Adjustable SLOW-DOWN and FUNCTIONING</b> speed		●	●	●	●		
DISPLAY		●			●		
Electronic BRAKE			●				
Endstop SELF-LEARNING of open and close positions		●			●		
SLEEP MODE		●					
Output for connecting the SOLAR PANEL		●					

● 230 V AC ● 24 V DC INTENSIVE SERVICE