


The table shows all of the features of the swing-gate operator specific control panels. Those in bold-type are important when selecting which operator to fit and should be considered from the start.

Models / Series	Frog Ferni Amico	Frog Ferni Axo Amico	Frog plus	Fast40	 Super Frog	Amico Stylo	Amico Axo Frog Ferni	Amico Axo Frog Ferni	Fast40	Frog Ferni	Frog Ferni
	ZA3N	ZM3E	ZM3EP	ZF4	ZM3ES	ZL92	ZLJ24	ZLJ14	ZL94	ZL170N	ZL19N
Control board / Control panel											
Features											
Safety											
SELF-DIAGNOSIS of safety devices		●	●	●	●	●	●	●	●	●	●
PRE-FLASHING during opening and closing	●	●	●	●	●	●	●	●	●	●	●
RE-OPENING during closing	●	●	●	●	●	●	●	●	●	●	●
RE-CLOSING during opening	●	●	●	●	●	●	●	●	●	●	●
Obstacle STALL		●	●	●	●	●	●	●	●	●	●
TOTAL STOP	●	●	●	●	●	●	●	●	●	●	●
PARTIAL STOP	●	●	●	●	●	●	●	●	●	●	●
OBSTACLE DETECTION in front of photocells	●	●	●	●	●	●	●	●	●	●	●
ENCODER		●	●	●	●	●	●	●	●	●	●
MOVEMENT CONTROL and OBSTACLE DETECTION device			●	●	●	●	●	●	●	●	●
AMPEROMETRIC DETECTION			●	●	●	●	●	●	●	●	●
Command											
PEDESTRIAN OPENING		●	●	●	●	●	●	●	●	●	●
PARTIAL OPENING	●	●	●	●	●	●	●	●	●	●	●
ONLY-OPEN feature with transmitter and/or button	●	●	●	●	●	●	●	●	●	●	●
Button connection for ONLY-OPEN or ONLY-CLOSE feature	●	●	●	●	●	●	●	●	●	●	●
OPEN-STOP-CLOSE-STOP from transmitter and/or button	●	●	●	●	●	●	●	●	●	●	●
OPEN-CLOSE-REVERSE from transmitter and/or button	●	●	●	●	●	●	●	●	●	●	●
MAINTAINED ACTION	●	●	●	●	●	●	●	●	●	●	●
DELAYED OPENING of 1st leaf	●	●	●	●	●	●	●	●	●	●	●
DELAYED CLOSING of 2nd leaf	●	●	●	●	●	●	●	●	●	●	●
IMMEDIATE CLOSING											
EMERGENCY RELEASE from transmitter											
Characteristics and adjustments											
Output for connecting the FLASHING LIGHT	●	●	●	●	●	●	●	●	●	●	●
Output for connecting the CYCLE LAMP	●	●	●	●	●	●	●	●	●	●	●
Output for connecting the COURTESY LAMP		●	●	●	●	●	●	●	●	●	●
Antenna	●	●	●	●	●	●	●	●	●	●	●
Output for connecting the SIGNALLING LAMP (gate open)	●	●	●	●	●	●	●	●	●	●	●
Output for connecting the SIGNALLING LAMP (gate closed)				●	●	●	●	●	●	●	●
Contact output for 2nd RADIO CHANNEL	●	●	●	●	●	●	●	●	●	●	●
OPERATION TIME adjustment	●	●	●	●	●	●	●	●	●	●	●
SELF-LEARNING of transmitter RADIO CODE	●	●	●	●	●	●	●	●	●	●	●
Output for connecting ELECTRIC LOCK and/or "HAMMER ACTION"	●	●	●	●	●	●	●	●	●	●	●
Adjustable TIME before AUTOMATIC CLOSING	●	●	●	●	●	●	●	●	●	●	●
Slow-down during OPENING and/or CLOSING		●	●	●	●	●	●	●	●	●	●
EMERGENCY FUNCTIONING with batteries (optional)						●	●	●	●	●	●
MASTER-SLAVE											
Adjustable SLOW-DOWN and FUNCTIONING speed*		●*	●*	●	●	●	●	●	●	●	●
DISPLAY		●	●	●	●	●	●	●	●	●	●
Electronic BRAKE											
Endstop SELF-LEARNING of open and close positions		●	●	●	●	●	●	●	●	●	●
SLEEP MODE									●	●	●
Output for connecting the SOLAR PANEL									●	●	●

NOTES
* 002ZM3E and 002ZM3EP only slow-down speed